


# Updating NXT Firmware

## Step 1

- Open LabVIEW
- Click **Tools >>**  
**NXT Tools >>**  
**NXT Terminal**

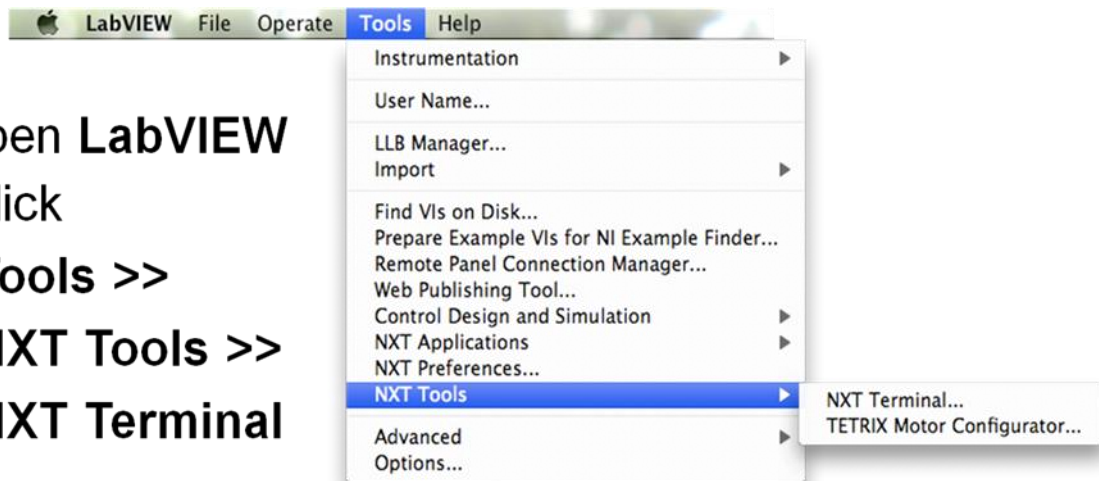

## Step 2

- Click **Update Firmware**

